Tel: +86 755 83418779 Fax: +86 755 88257909 web: www.epordo.com

Hotel lock software V7.1

Dear Customer.

Thanks very much for using our <u>hotel lock management system</u>. After you get device, only need to swipe **authorized card** and **room cards**! no need time card and setting card any more!

- *Swipe one time Authorized card on lock: means Authorization, then swipe guest room card for one time; then this guest card can open this lock!
- *Swipe three times Authorized card on lock: means clear all info inside lock!

If you want to change lock to other room no. then swipe 3 times authorized card on lock, then swipe one time new guest room card; then this new guest room card can open this new room no lock

- —: Installation Hotel lock software Default password: 0
- 1. Check CD, there is both software and manual, Install software: epordoLocksystemV7.1.exe on your PC! after install is successfully, you will see this icon:
- , (connect your encoder to PC firstly) then you can click it to login, and you will see below photo:

Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>




Original password is **empty**;


After login, you will see hotel lock software interface:

2

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

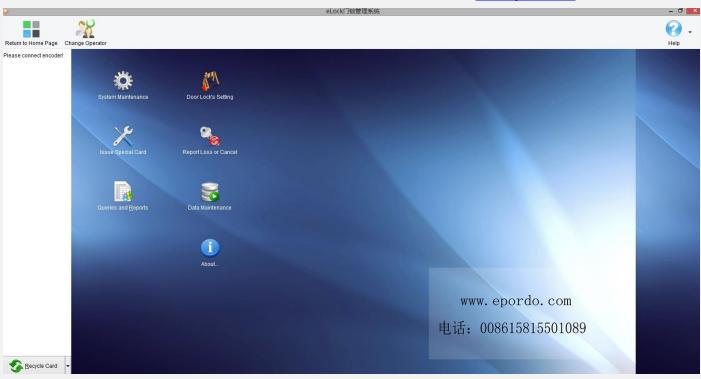



二: software registration(regist card reader)

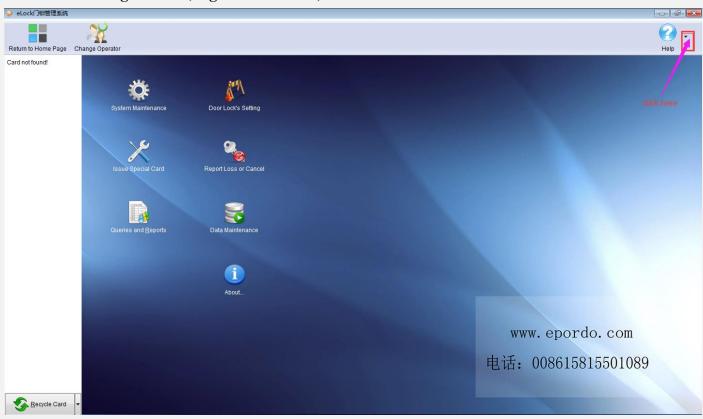


Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

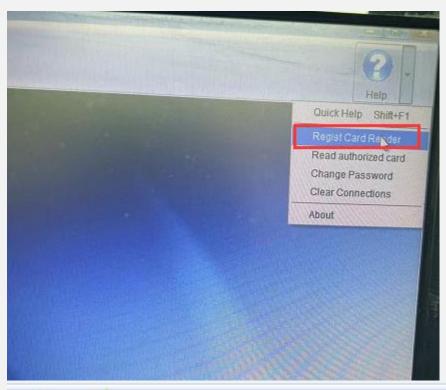


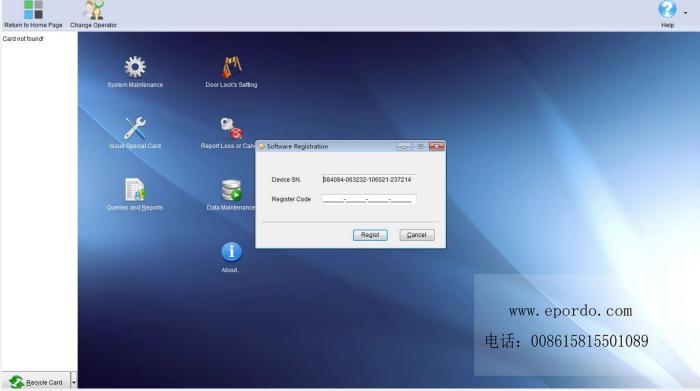


Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

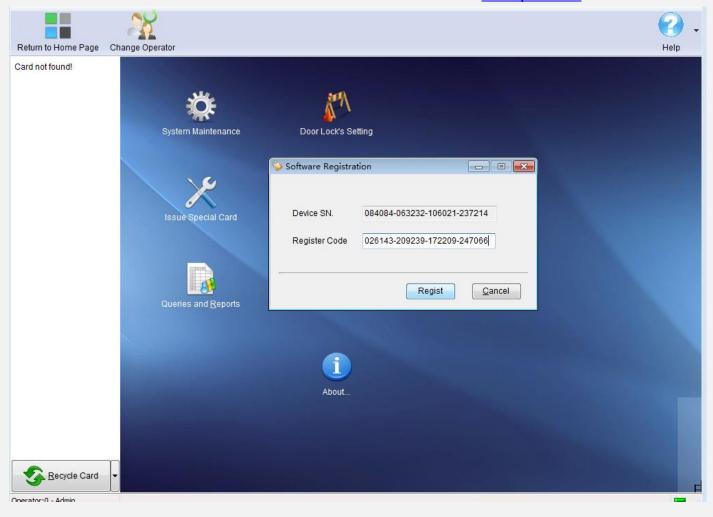


Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

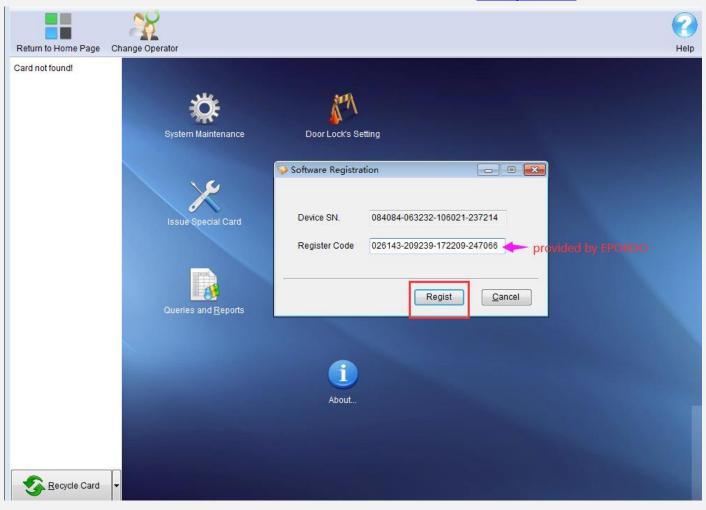

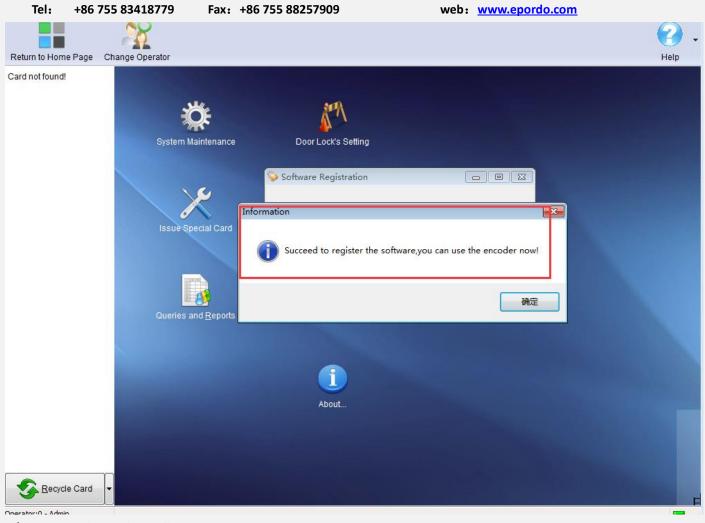

三: Read Authoized Card

Read Authorized card inside software firstly!(connect encoder to PC by UBS cable we provised, login software, put authorized card on encoder, then click"Read Authorized card" at the left-down side bottom; click Read) check below photo

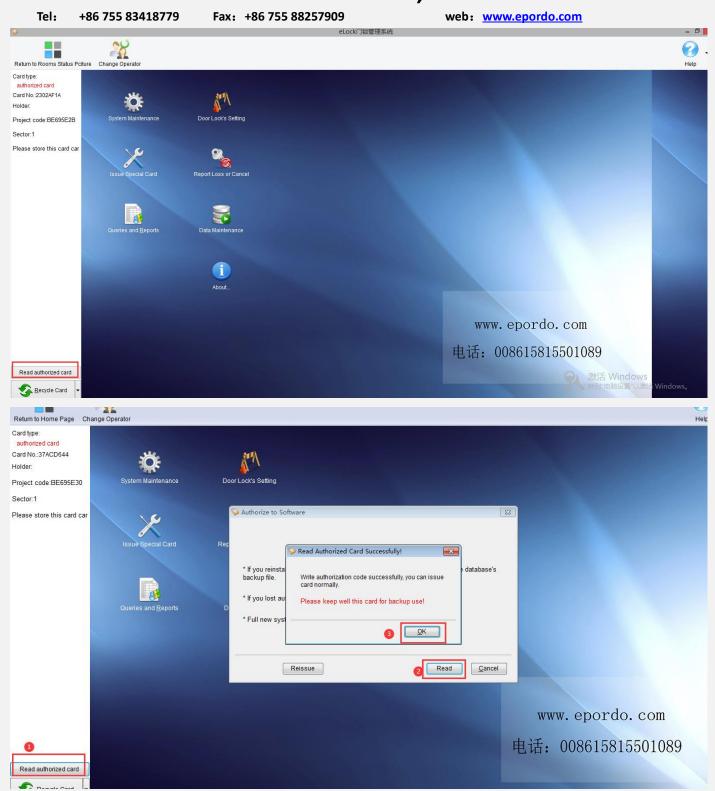

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

四: Swipe Authorized card on lock for only one time – then you can go to take one blank card and put it on encoder and issue one master card (then it can open all lock) check below photo; after issue master card successfully, then you can use this mask card to open lock; it can open locks now




五: Now you have to set your hotel information below: such as room information, building, area, room




type ,,, under this item:

Room type: here you can add or delete room type..... such as room type, price, remarks,,, and click save

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

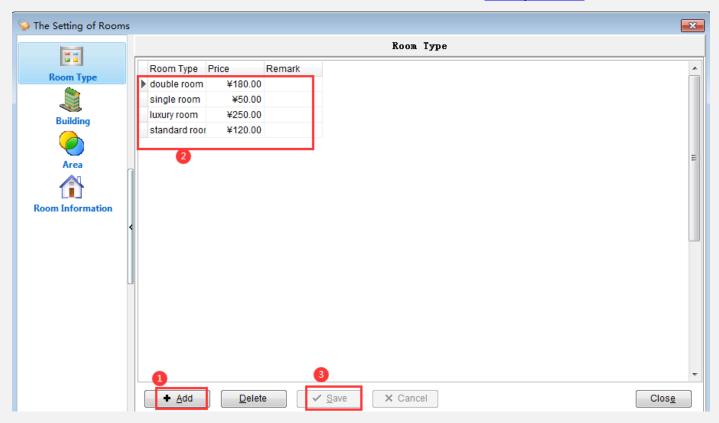


<u>Building information</u>: you can set building name, building No. Floor No(how many floors in this building)....

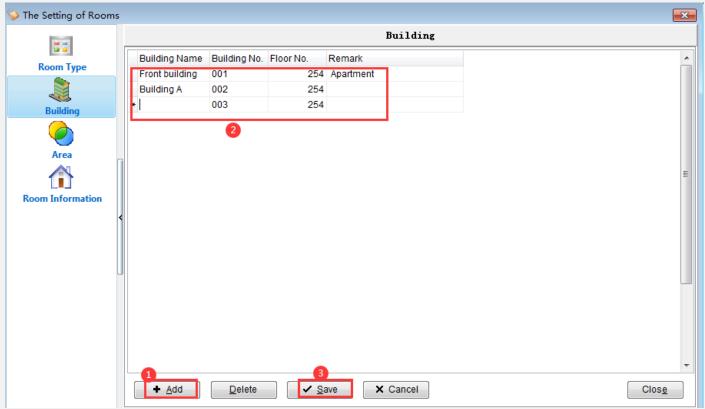

Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>


Area Information:

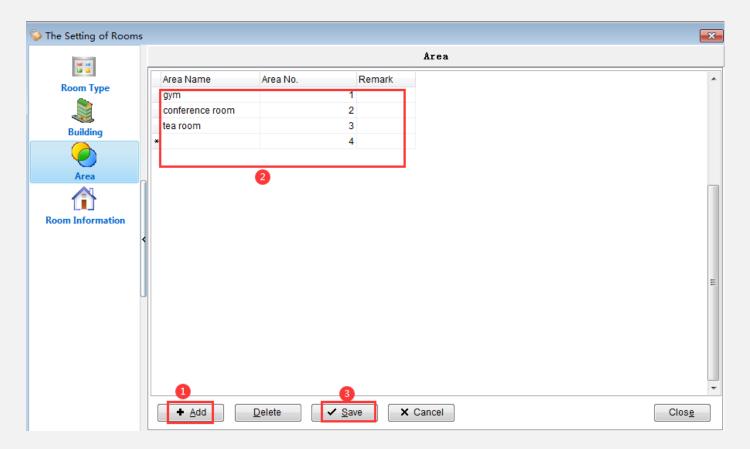


Room Information:

Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.


Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

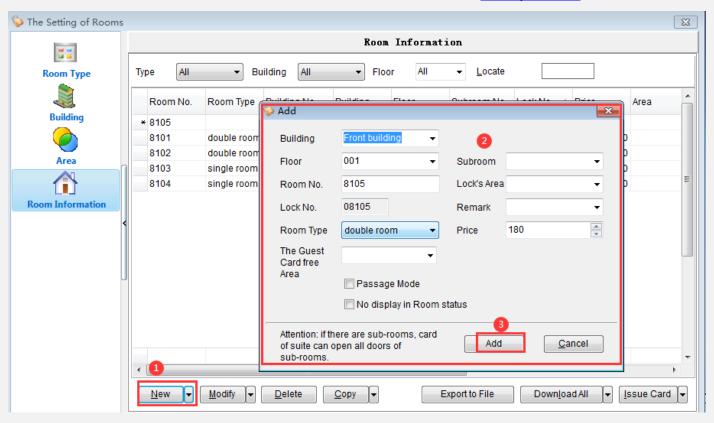

Click here: return to room status picture

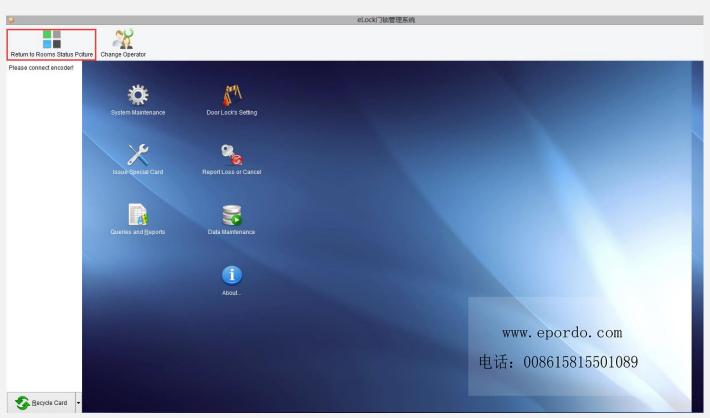


Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.

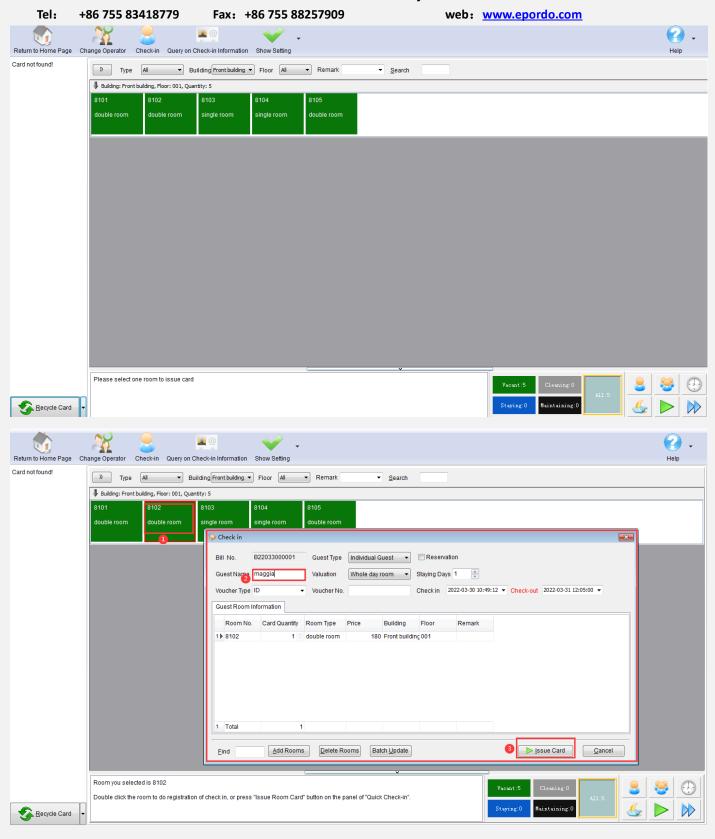


Put one blank card on encoder

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

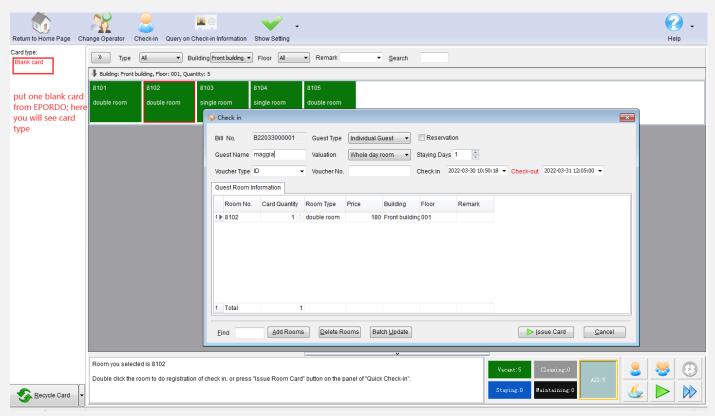

After you issue this blank card to 8102 room guest card successfully, you will see below photo (put the card on encoder, u will see this card details on the left column)

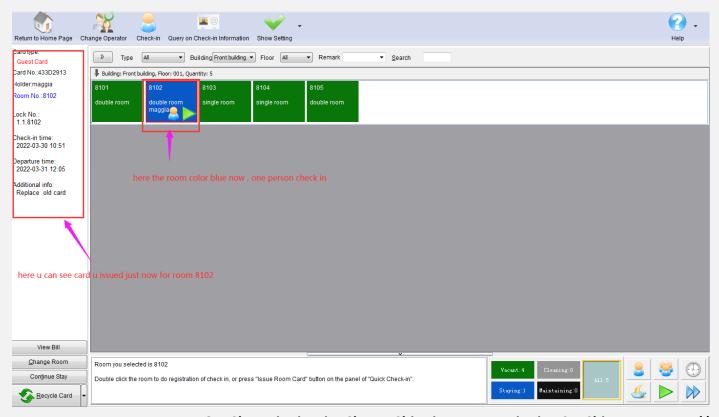


Room 411, GuoShengJinXingLianChuangShiDai, LongHua District, SZ, China.

14

Tel: +86 755 83418779 Fax: +86 755 88257909 web: www.epordo.com


Then you can swipe 1 time authorized card, then 1 time guest card on lock; u will hear di-di and blue light on; then it means this guest card can open this lock; now you can use this guest card swipe on this lock, the lock will open!

Click here, you cards can be empty and reused again

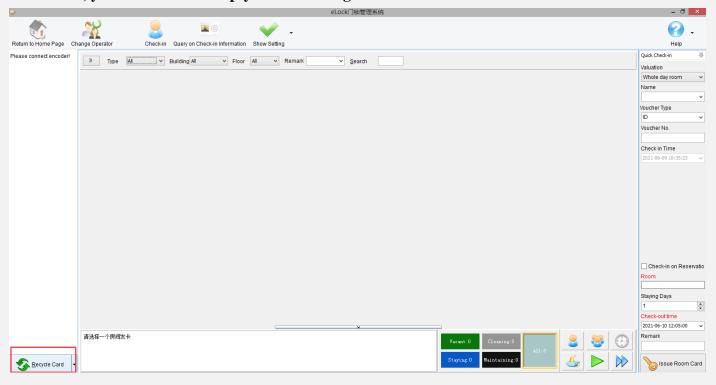


: How to use Handset: lock management assistant (you have to do Synchronization with authorized card, card encoder, PC software)


- 1. Connect USB encoder to PC ,Login software ,Read authorized card in software ; and put Authorized card on encoder !!!!
- 2.Power on lock management assistant by press power key at the botton of device for 3 seconds; Connect handset to PC by USB cable; select menu of handset: PC Synchronization

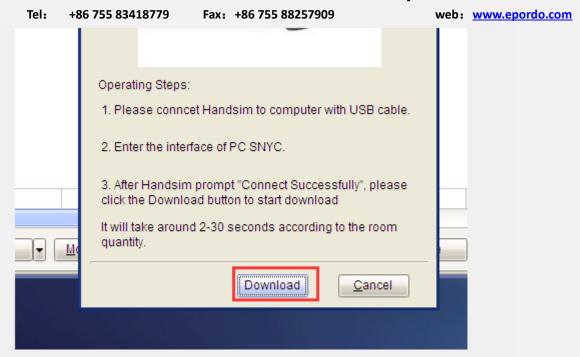


After it shows: connect successfully on handset screen, then click download: you will see below photo, showing: download 5 rooms successfully!

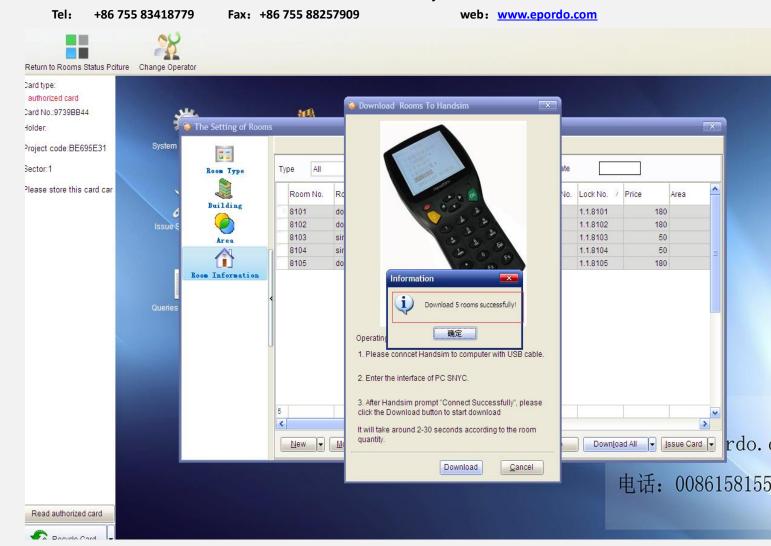


Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

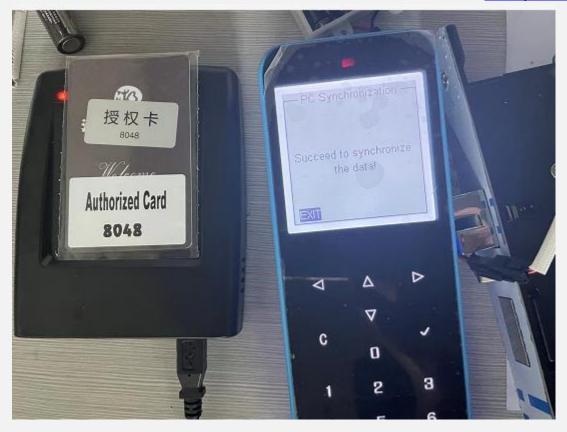

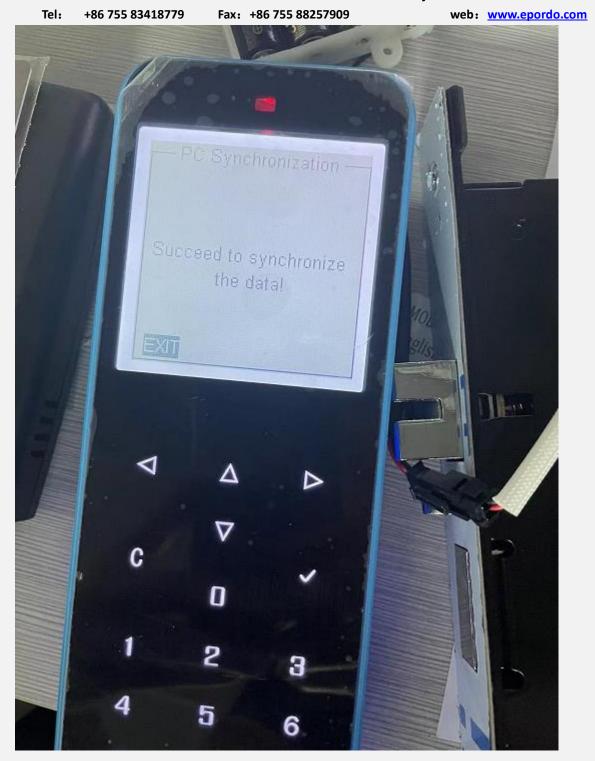

Then we can use the handset now; for example, if u want to get this lock information, you can click: read lock info on the handset; and swipe handset on lock sensing area; u will see below photo

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

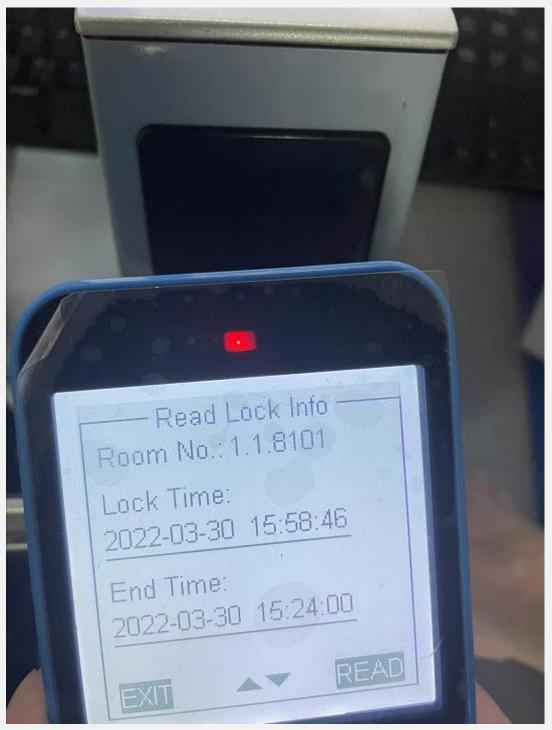

User can use handset to set room no into lock, more convenient for installation!

Tel: +86 755 83418779 Fax: +86 755 88257909 web: www.epordo.com

hardware setting

Your will receive hotel locks and encoder and cards:

For cards:

- 1. Authorized card one piece: used to initialize all locks
- 2. Other white cards are blank cards, then you can issue as room card ,,,master card...
- 3. Enocder: card reader, it is used to issue cards for hotel; and put it on reception desk; connect by its USB cable with PC and encoder; no need other installation!
- 4. Power getting switch: used to install inside each hotel room, when guest come in, he has to insert his room card inside switch, then can get room electricity
- 5. Lock management assistant: use to intialized locks and get lock events

After you receive lock, install 4pcs AA battery, connect to cylinder and front cover lock;

- 1. Connect encoder to PC by USB cable and login software
- 2. Issue one room card by software and encoder(put one empty blank white card on encoder and issue one room card, such as room no.101; then issue it, this card is 101 room card now)
- 3. Swipe **one time** authorized card(blue light on) on one unit lock, after one second, then swipe the precious 101 room card on this lock, also blue light, now this lock inside is with room no.101 and time; then swipe again this 101 room card, this lock will be open;


Actually, after you swipe one time authorized card, blue light on, this lock now is under programming status, then u swipe room card, this room card no. And time will be written inside this lock, then finish this lock initialization; this lock has room no. Inside it now;

In hotel, when you receive all locks, all locks should has its own room no.; because every lock will be installed on different doors with different rooms no; lock initialization is to set room no. Into these locks; hope you understand now!


Please note: lock initialization only need to <u>swipe authorized card on each lock for one time!</u> please do not swipe authorized card many times!!!!!! Or you can use Handset to initializa all locks ,to set rooms, more convenient!

<u>Lock Initialization steps: 1 time authorized card-after one second-one time room card</u> Swipe : Authorized card for one time

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

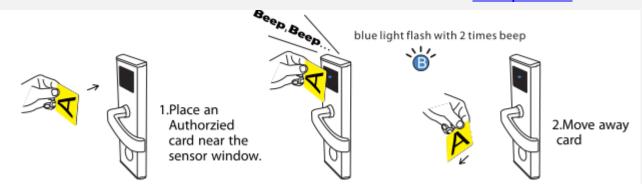


Swipe: room card for one time

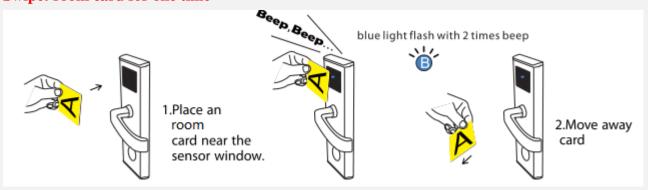

Lock initialization successfully , now this lock is with this room no inside ; and now you use this room card swipe on this lock, lock will be open!

Note: if the above Lock Initialization failed; then you can use below method to finish lock initialization by below:force authorization steps

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

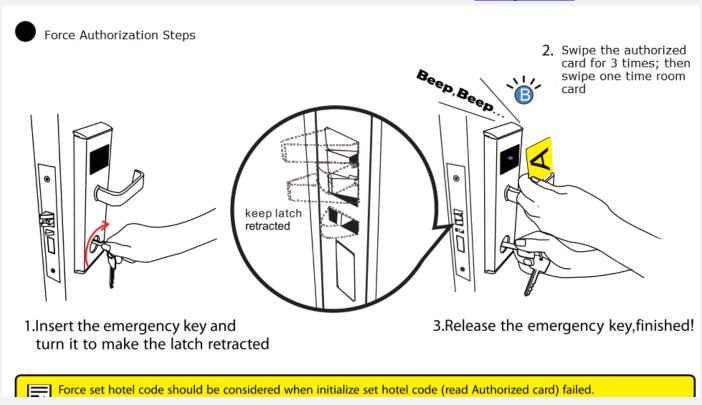


Important notes:

If you want to delete the lock inside data(room no..) then you can swipe 3 times authorized card! for example, if this lock now u have already set it with room 101 no., but now you want to change this lock room no. Then you can swipe 3 times authorized card, now if you use previous 101 room card to open this lock, this lock can not be open; because there is no room no.in this lock;


in one word: swipe 3 times authorized card: means delete all information inside lock!

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

Hardware Installation:

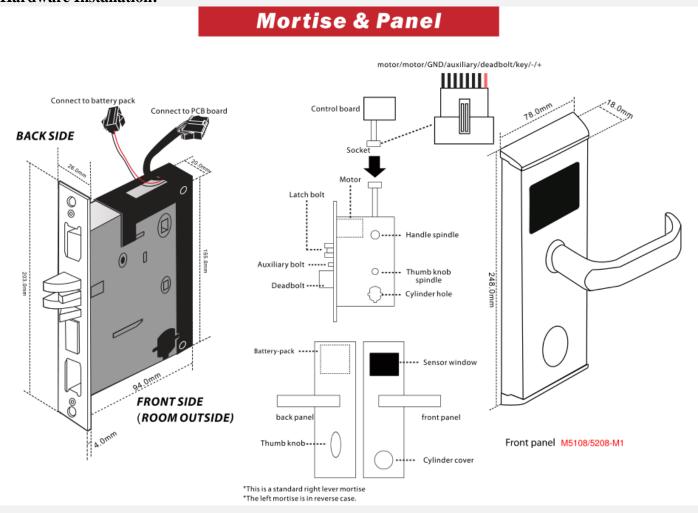

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

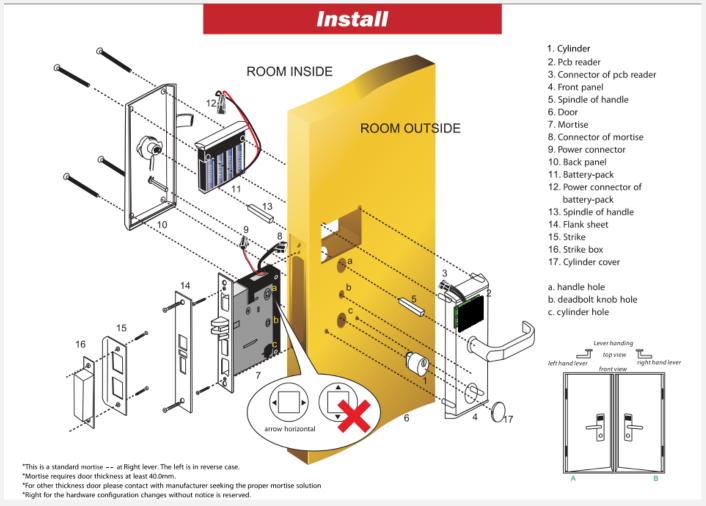

25

Tel: +86 755 83418779 Fax: +86 755 88257909 web: www.epordo.com

Install

Installation steps

1.Punch holes

Each lock installation requires holes on the door.
To punch the holes you must use the template correctly.
Take out the template.On the front side of the template it shows

the edge of the door (on the right direction). Please always aim the edge of the door line at the real door. You should turn the template reverse to let it suite another face of

Firstly mark the height line on both faces of the door. (height line start from the handle center and it is away from the ground 1.0-1.1m) Then mark the balance holes by a pencil or markingpen.Paste the flank face template on the door by aligning

the main. Mark the mortise hole Punch all holes by the electric drill according the marks.



Template should be use repeatly for all doors punching. Holes size and position may different for different model lock please check it carefully before start punch.

Holes must not bigger than the size on the template otherwise the holes may exposed outside. The mortise hole on the flank must be punched at enough depth otherwise the mortise could not be placed in.





Slotting Template

 
2.Install the mortise
Put the mortise into the hole and
holding it square to the door
edge, draw around the faceplate.
Remove the mortise and score
the outline with a stanley knife to
avoiding splitting when
chiseling. Chisel a rebate to allow
the latch to fit flush to the
surface.Fix the mortise with the
screws, with the bevel towards
the door frame.

3. Fix the cylinder Insert the cylinder from front and tight the screws from back by using the inner hexagon screw driver

4.Install front and back boby:

Export the cable from the hole, put the axis, connect the lock front and back boby with link cable through the hole, ensure plug correctly connect with the back boby slot, then connect inside and outside with square shaft, ensure the lock plate and the mortise connection are reliable, finally screw the lock plate in the door.

5.Install the battery and Battery Pack Cover: After confirm the positive direction of the battery, closes Pack Cover




6.Test:

After the installment completed, check if the basic function works is necessary.

Test Cylinder and Power

Instert the emergency key and trun it to make the latch retracted, if the lock shows blue light and one beep that is means the cylinder and power works fine.

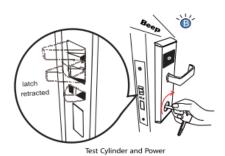

Test Thumb Turn

Thumb Turn drives the deadbolt out and retracted manually. And it can be released automatically by turning the back handle. Please make sure the back handle and thumb turn works fine before


Please make sure the back handle and thumb turn works fine before closing the door otherwise it may cause problem that the lock can not be opened or closed from inside room.



Push and pull to open it

For the safety, it is suggested strongly that you check the operation of the emergency key and back lever handle under the door in opening status

TOOLS

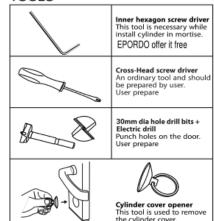

EPÓRDO offer it free

Any more questions, feel free to contact us


Skype: epordo_sales Skype: efocus008@hotmail.com


Whatsapp: 008618665332487

Yours Sincerely

E-Focus CHina (www.epordo.com)

2022-3

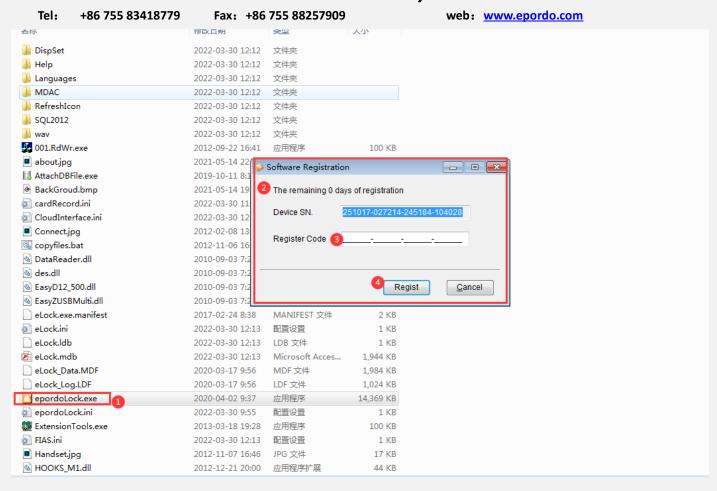

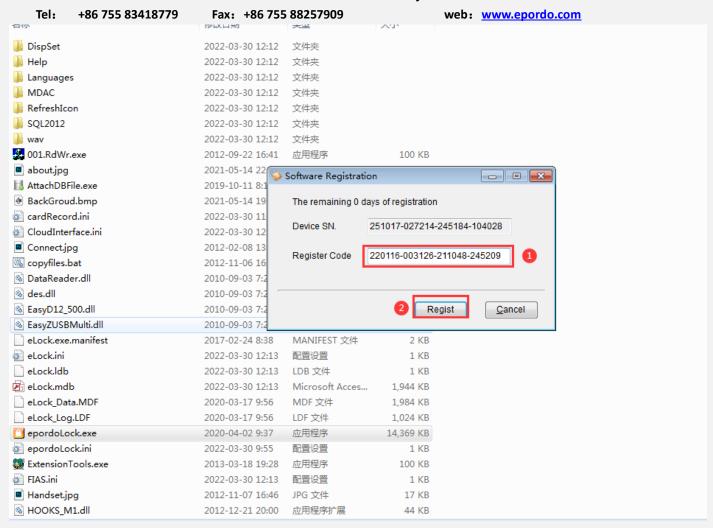

Tel: +86 755 83418779 Fax: +86 755 88257909 web: <u>www.epordo.com</u>

